
NIL BRAND RC121 MANUAL (ENG) SIZE: W75 X H80 (mm) BY Lai H Z 12/03/15

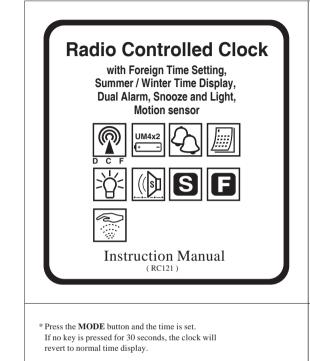


TO SET THE LANGUAGE OF WEEKDAYS

\*In normal mode, press and hold the v button for 3 seconds. \* The language of the current weekdays will be displayed in the LCD : e.g. English (EN), German(GE), Italian(IT), French(FR), Spanish(SP). \* Press the v button for 1 second to adjust to the correct language of weekdays.

## TO SET THE FOREIGN TIME

- \* In normal mode, press and hold the  $\blacktriangle$  button for <u>3 seconds</u>. The clock will switch to foreign time with the "F" icon turn on.
- \* Press and hold the **A** button for <u>3 seconds</u> in foreign time will switch to normal time with the "F" icon turn off.
- \* In foreign time, press and hold the MODE button for <u>3 seconds</u> to set the foreign time with the hour digit flashes.
- \* Press the **v** button or the **a** button to adjust to the correct hour for the time zone.
- \* Press the MODE button and the foreign time is set.
- \* If no key is pressed for 30 seconds, the clock will revert to foreign time display.

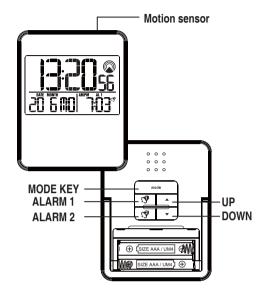

## TO SET THE DAILY ALARM 1

Press and hold the **SET** button for <u>3 seconds</u>: \* The alarm1 hour digit will flash, then press the ▲ button or the ▼ button to adjust to the desired hour.

\* Press the **SET** button, the alarm1 minute digit will flash, then press the  $\blacktriangle$  button or the  $\blacktriangledown$ button to adjust to the desired minute.

\* Press the **SET** button to show the current snooze period with the minute field flashes.

\* Press the ▲ button or the ▼ button to adjust to the desired snooze period from 1 minute to 59 minutes.

\* Press the **SET** button and the alarm1 time is set and enabled.

\* If no key is pressed for 30 seconds, the clock will resume the alarm l display.

### FEATURES: \* Controlled by Radio Signal (German DCF77)

- \* Large LCD display
- \* Displays Hour, Minute, Second; Month, Date, Day of Week,
- Alarm Time
- \* Foreign Time Setting (-9 Hour to +9 Hour) \* Summer Time Indicator
- \* Dual Alarm with programmable snooze period \* Independent Alarm Time Setting - Crescendo Daily Alarm1 &
- Single Alarm 2
- \* 12 Hour or 24 Hour Display Format Selectable
- \* Weekday Indication in 5 Languages
- \* battery Low Indicator
- \* Backlight function
- \* Two Battery (1.5V) mignon LR03 Operation

## TO SET THE ALARM 2

12:38<sub>05</sub>

12:3805

<u>978</u>FR| -04

29.858 300-

29 8 FR 180

\* Press and hold the SET button for <u>3 seconds</u>: \* The alarm2 hour digit will flash, then press

the  $\blacktriangle$  button or the  $\checkmark$  button to adjust to the desired hour.

\* Press the SET button, the alarm2 minute digit will flash, then press the  $\blacktriangle$  button or the  $\blacktriangledown$ button to adjust to the desired minute.

\* Press the **GSET** button to show the current snooze period with the minute field flashes.

- \* Press the ▲ button or the ▼ button to adjust to the desired snooze period from 1 minute to 59 minutes.
- \* Press the SET button and the alarm2 time is set and enabled.
- \* If no key is pressed for 30 seconds, the clock will resume the alarm 2 display.

INDICATOR STANDING FOR INDICATOR STANDING FOR		STANDING FOR	FUNCTION KEYS	TO SET THE TIME AND DATE MANUALLY
Radio Signal	•	Radio Signal weakly	Your radio-controlled clock has 6 easy to use function keys that control	
DITE Date	MONTH	Month	operation:	
Foreign Time indication	6	Summer Time indication ALARM 1	MODE	
PM PM (12 HR Display only) AM AM (12 HR Display only)	19 19	ALARM 1 ALARM 2	<ul> <li>To view alarm1 time or alarm2 time</li> </ul>	Press and hold the <b>MODE</b> button for <u>3 seconds</u> :
Low battery indication	ZZ	Repeat Alarm Indication	<ul> <li>To set the time manually</li> </ul>	* The hour digit will flash, then press the <b>A</b> button
		riopout / italini indication	• To set the foreign time manually.	or the $\mathbf{\nabla}$ button to adjust to the correct hour.
<ul> <li>SETTING THE TIME</li> <li>* Once the battery is installed properly, all the displays on the face of the clock will light up briefly. The time &amp; date will be: IDATE 1MONTH WE 0:00 and the alarm1 time will be 7:00.</li> <li>* Your radio-controlled clock will begin to seek out the DCF time signal automatically. This takes typically between 3-5 minutes in good conditions. If after 5 minutes the DCF time has not been received, use the MODE key to set the time manually. The clock will then automatically attempt to receive the DCF time each hour every day. When this is successful, the received time will override the manually set time</li> </ul>			<ul> <li>To increase the hour, minute, year, month, date during time setting</li> <li>To switch between 12 hour display format and 24 hour display format.</li> <li>To switch between the local time and foreign time</li> <li>To decrease the hour, minute, year, month, date, during time setting</li> <li>To select the language of day of week.</li> <li><b>19</b> SET</li> <li>To set the daily alarm1</li> <li>To turn on or turn off the daily alarm1</li> <li><b>19</b> SET</li> <li>To set the daily alarm2</li> <li>To turn on or turn off the daily alarm2</li> <li>Motion Sensor</li> <li>To turn on the backlight</li> <li>To switch to snooze mode when the alarm is activated</li> </ul>	<ul> <li>* Press the MODE button: The minute digit will flash, then press the ▲ button or the ▼ button to adjust to the correct minute.</li> <li>* Press the MODE button: The year digit will flash, then press the ▲ button or the ▼ button to adjust to the correct year.</li> <li>* Press the MODE button: The month digit will flash, then press the ▲ button or the ▼ button to adjust to the correct month.</li> <li>* Press the MODE button: The date digit will flash, then press the ▲ button or the ▼ button to adjust to the correct month.</li> </ul>
USING THE ALARM AND SNOOZE FOR DAILY LARM 1 or ALARM 2 Press the $\Im$ SET / $\Im$ SET button to turn the alarm1 on, or the alarm1 off/ the alarm 2 on, or the alarm2 off. When the current time reaches the alarm time that is enabled, the corresponding alarm is activated. Press the $\Im$ SET / $\Im$ SET button when the alarm is activated will stop the alarm for 24 hours. When the alarm is activated, moving your hand directly over the motion sensor and the alarm stops but sounds again after the snooze period (4 minutes snooze period is pre-programmed). The repeat alarm indicator will flash. The alarm will stop after 4 minutes if the $\Im$ SET / $\Im$ SET button or no swing the hand over the motion sensor			RECEIVING THE RADIO CONTROL SIGNAL The radio-controlled clock will automatically receive the radio signal every hour. It will take 3-5 minutes to receive the radio signal. If the DCF signal is received, the DCF tower will be visible on the display, otherwise it will not. BACKLIGHT Moving your hand directly over the motion sensor up to 30 cm away illuminates the display for approximately 5 seconds. LOW BATTERY LEVEL DETECTION Should the battery capacity drop to a level that is not sufficient to operate the clock, the low battery indicator will light up. The battery should be replaced as soon as possible.	

in an ecologically safe manner.



1**2:30**05

12:38<sub>05</sub>

129 8 FRÀ 540







0.088





# 28839

